



Changing Channels

Receivers

The keypads in each classroom communicate with a receiver that is set to a specific channel.




Channel 42

If you use the keypad in more than one class, you may need to change the channel at the beginning of each class.




Go to Main Screen

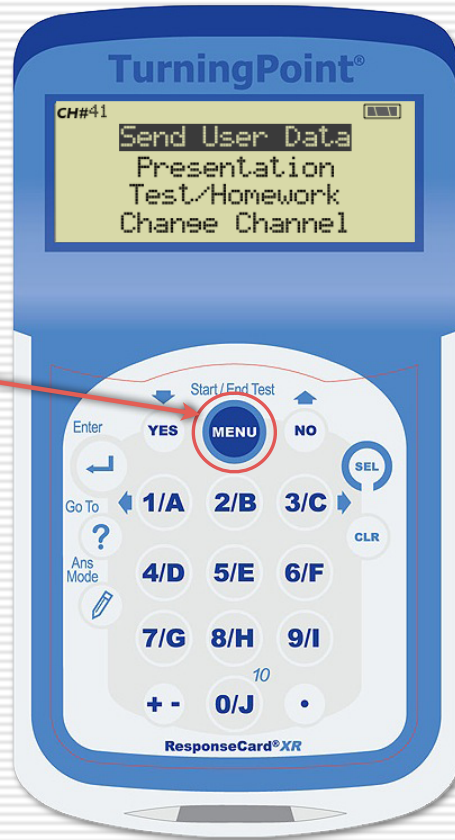

Press MENU button until you see the main screen

Change channel menu

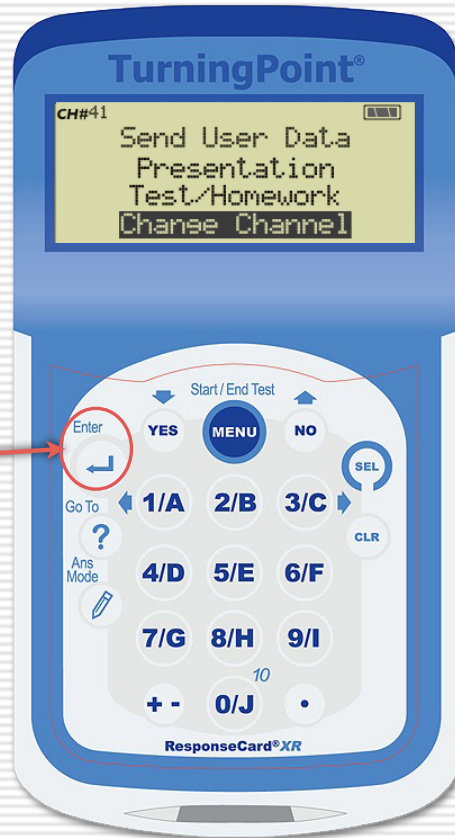


Use the down arrow key (Yes) to select the Change Channel Menu item.

Press the Enter key to change the channel

Changing Channel


You will momentarily see the change channel screen

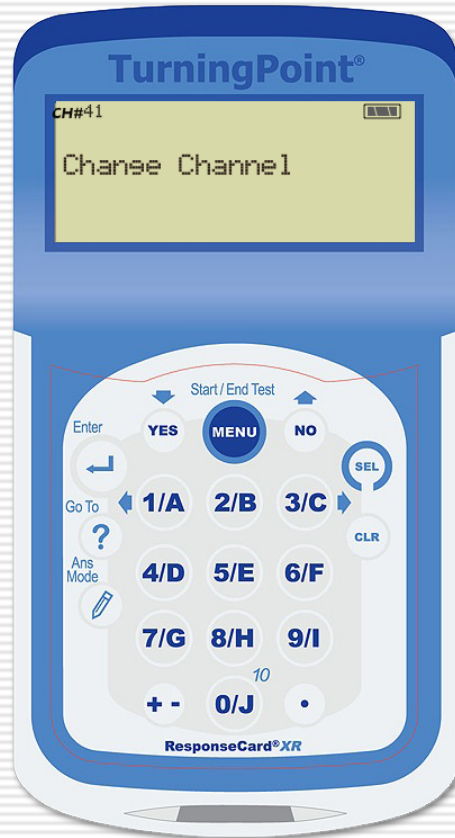

Check your channel

The first screen reports your current channel. Your instructor will let you know what channel to use.

If the current channel is correct, then press the Enter button, otherwise...

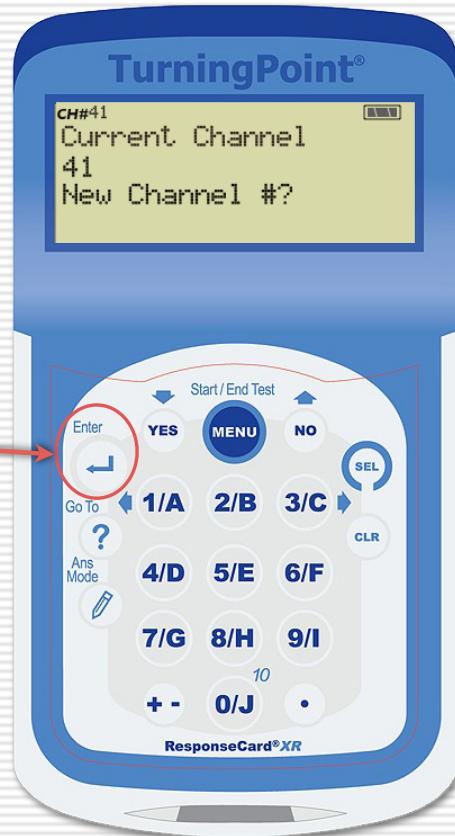


Enter New Channel

You can then use the keypad to enter a new channel number.


Press Enter to change to the new channel

(Valid channel numbers are from 1-74)

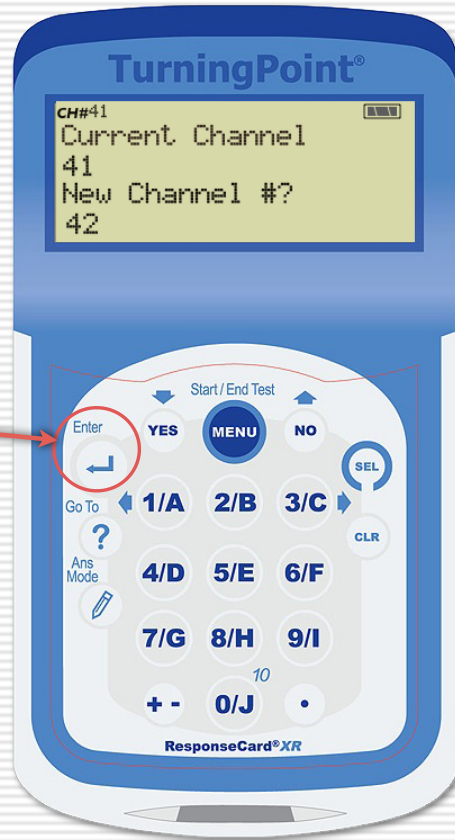


Receiver Found

If the channel is correct, the keypad will report that the channel has been changed and the receiver was found.

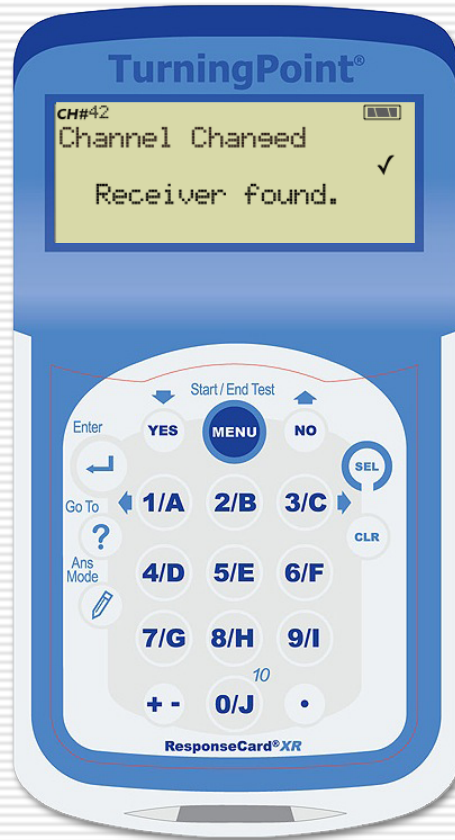

Receiver not found


If there was a problem finding the channel, the keypad will momentarily indicate that it can't find the receiver.

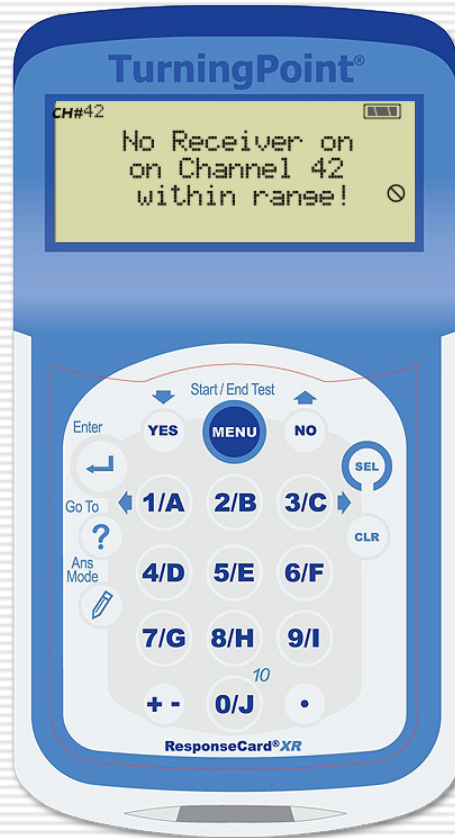

Try another Channel

After reporting that the card cannot find the receiver, you will be asked if you want to try another channel.

Press YES to repeat the channel entry process.

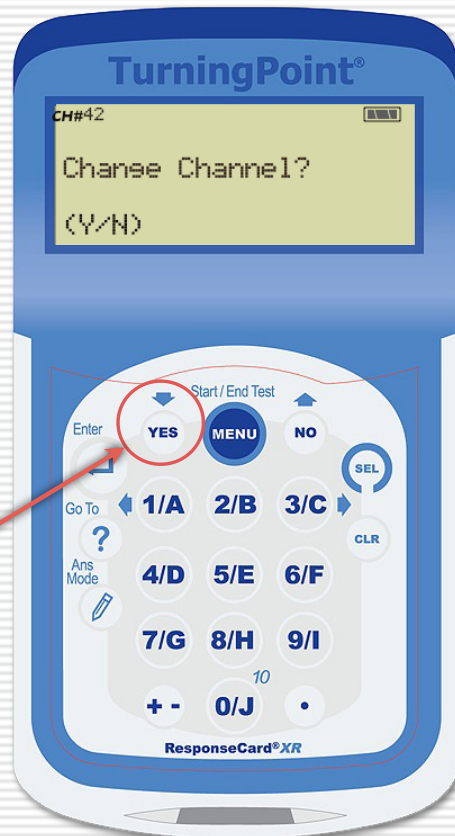

Presentation Mode

After the keypad has successfully found a receiver, it will enter into Presentation Mode and you can begin entering answers when polling is open.

