




Keypad Maintenance

Activating the Keypad

The battery is deactivated when the unit is shipped.

Turn the keypad over to activate the battery.

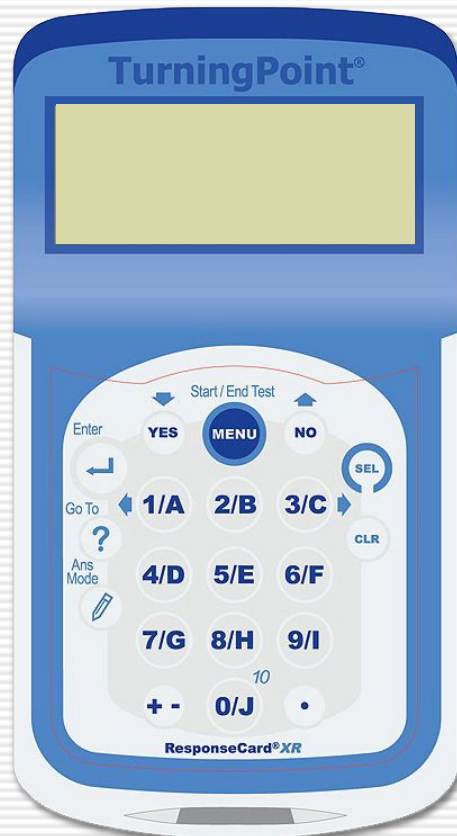

Activating the Keypad

A clear plastic strip sticks out of the battery compartment.


Simply pull this strip out to activate the keypad.



Powering Up

When the strip is removed, the keypad will momentarily show this display


(This will also happen when the batteries are replaced)

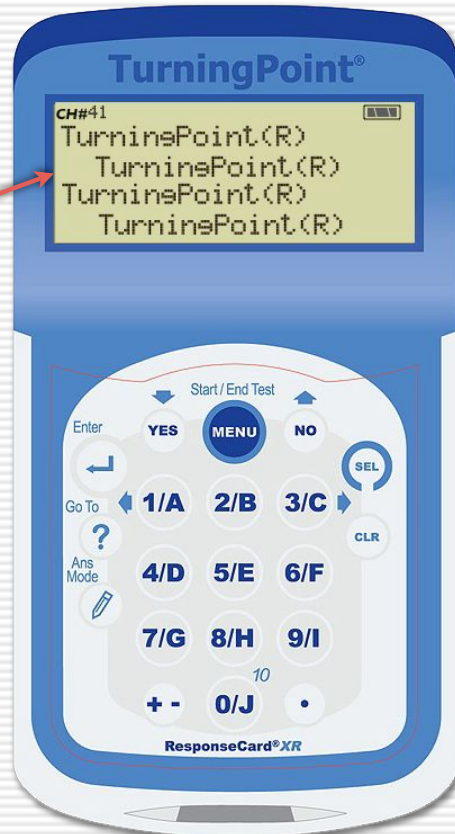

Presentation Mode

After the keypad has powered up, it will enter into Presentation Mode and will be set to Channel 41 as default.


It is normal for the screen to go blank in a few seconds. Press any key to reactivate the screen.

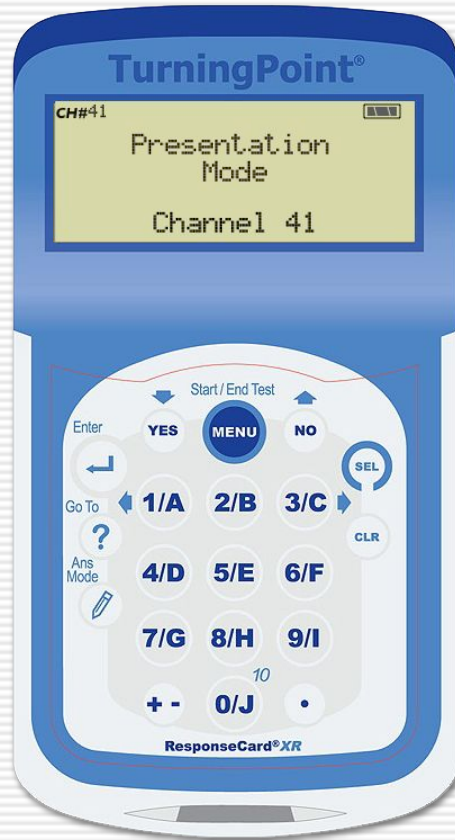

Changing the Batteries

The keypad takes two AAA batteries

You'll need a small Phillips head screwdriver to open the battery compartment

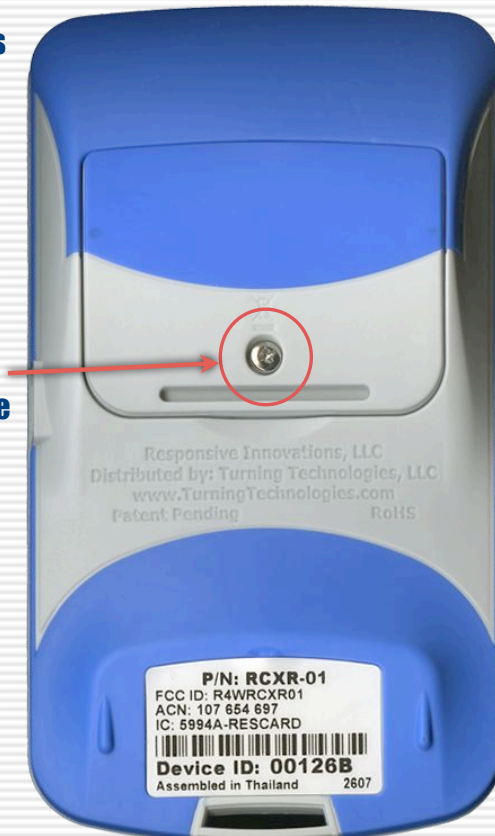

Changing the Batteries

The batteries are a tight fit, you may need to use a small screwdriver to gently loosen the bottom one.

Make a note of how the batteries are positioned.



Positioning the Batteries

Once the batteries are out, it may be difficult to see the orientation. This might help.




Troubleshooting

If the screen remains blank after pressing any key, open the back of the case and remove the batteries.



Troubleshooting


Put the same batteries back in and see if you get the startup screen as shown.

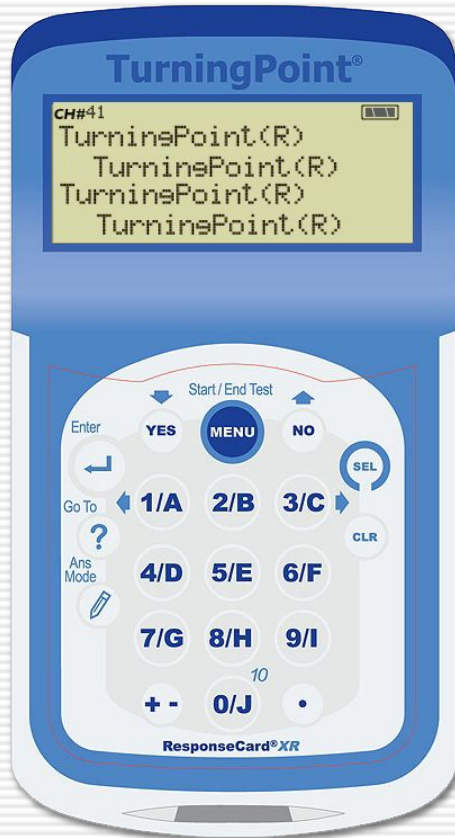

Troubleshooting

If resetting the batteries does not fix the problem, then replace the batteries with a new set of AAA batteries.

(Do not replace just one of the batteries, replace both at the same time)

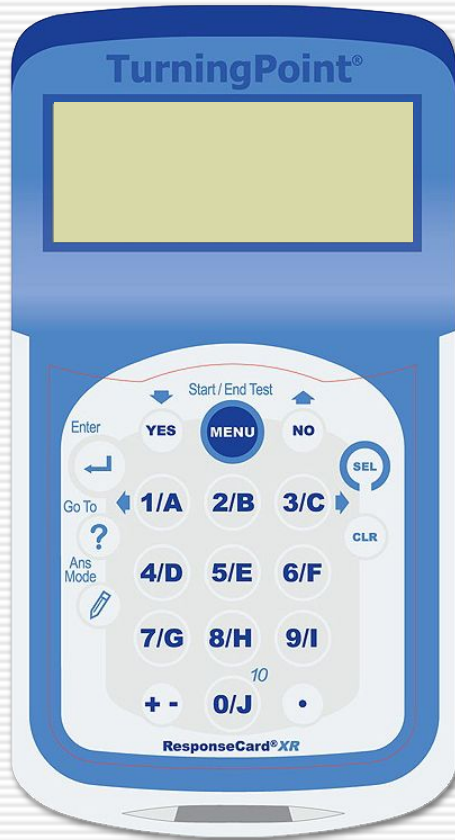

When all else fails!

If replacing the batteries still doesn't solve the problem, return the keypad to the point of purchase.

If you bought the keypad from the bookstore, be sure to have your original receipt handy. The keypad has a one-year warranty.

