


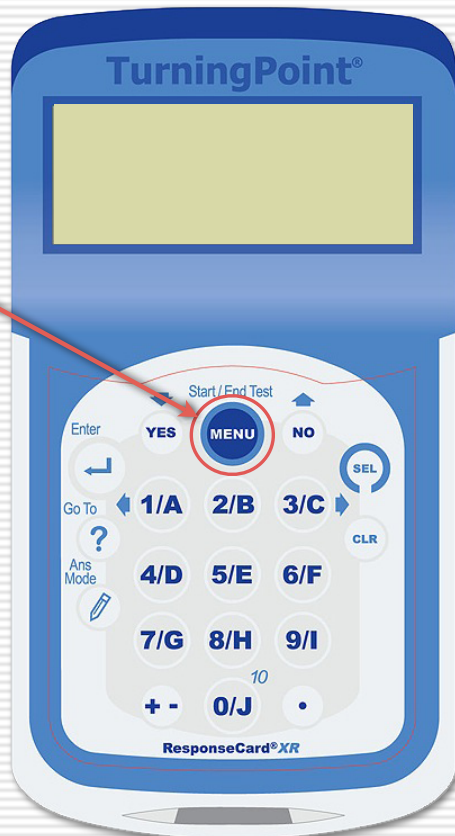

Setting Up Your Response Pad

RCXR-01 Response Pad

Press MENU button




Default Menu Screen

Current Channel
(each classroom may have a different channel)

Battery Status
(two AAA batteries in back)


Press YES to scroll down through Menu

Press NO to scroll up

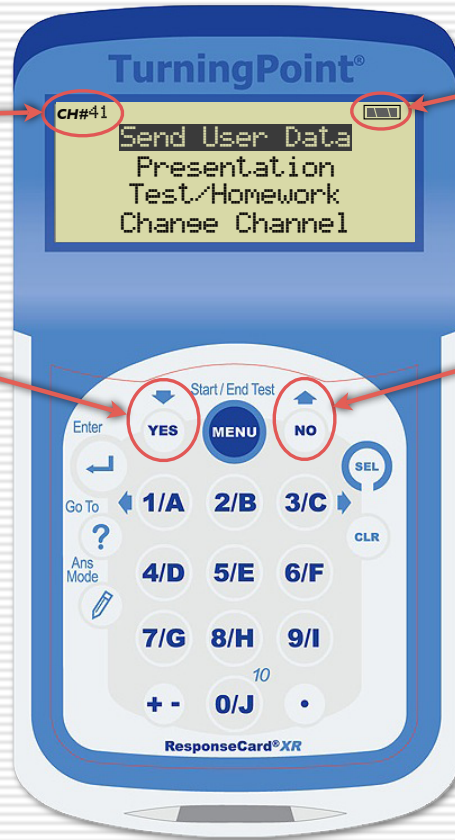


Navigating the Menu


Press YES 4 times to get to Setup Menu

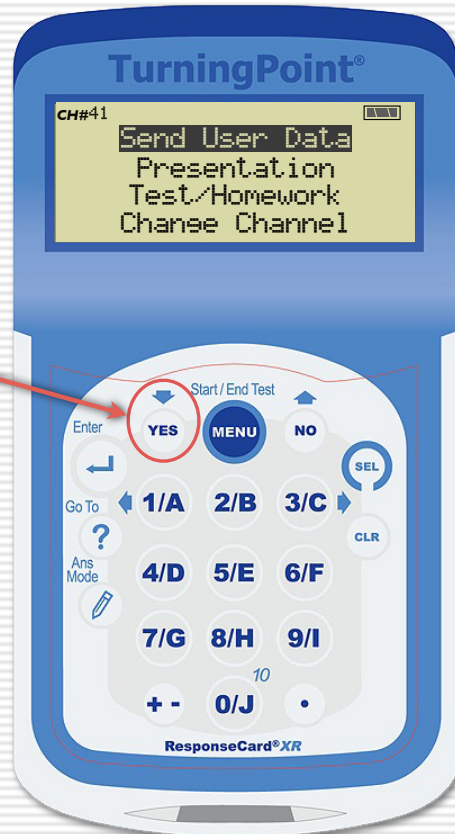


Navigating the Menu

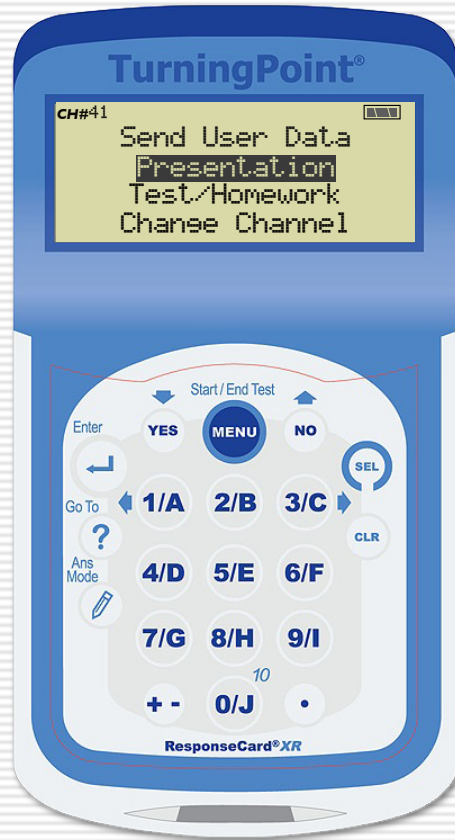


Navigating the Menu

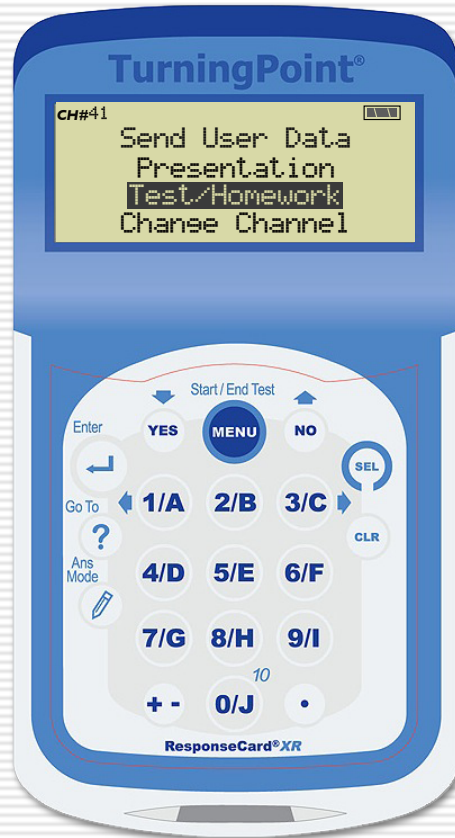

Navigating the Menu

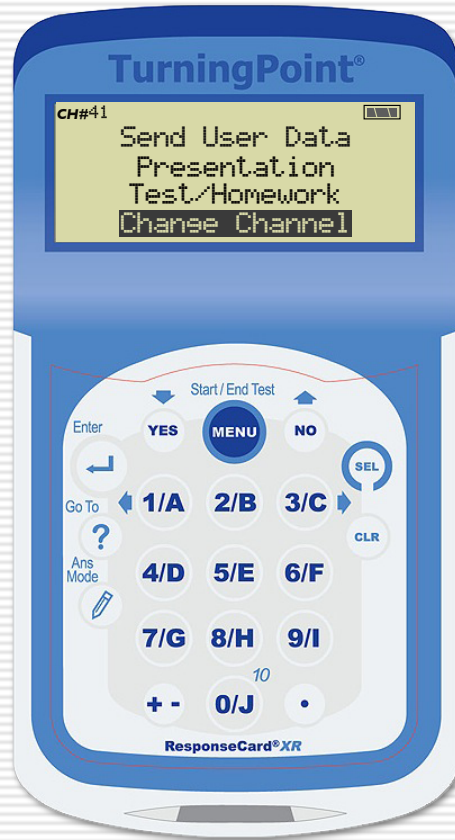


Setup Menu

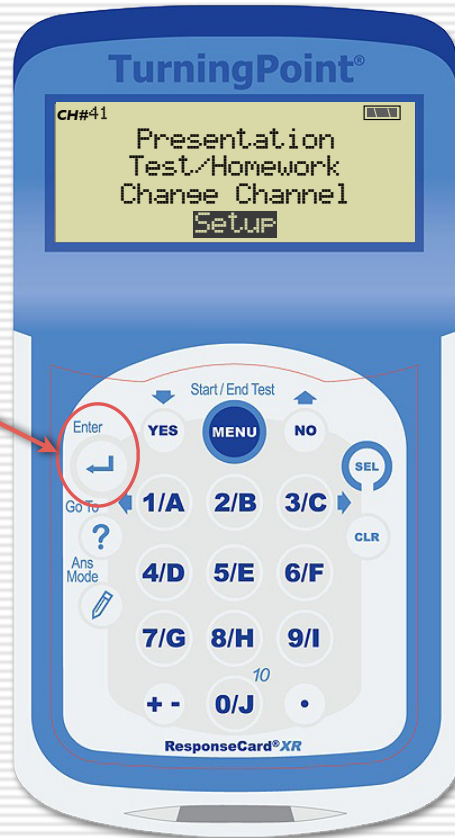

Press Enter to go into Setup Mode


(If the screen goes blank, press any key except the MENU key)

Select User Data

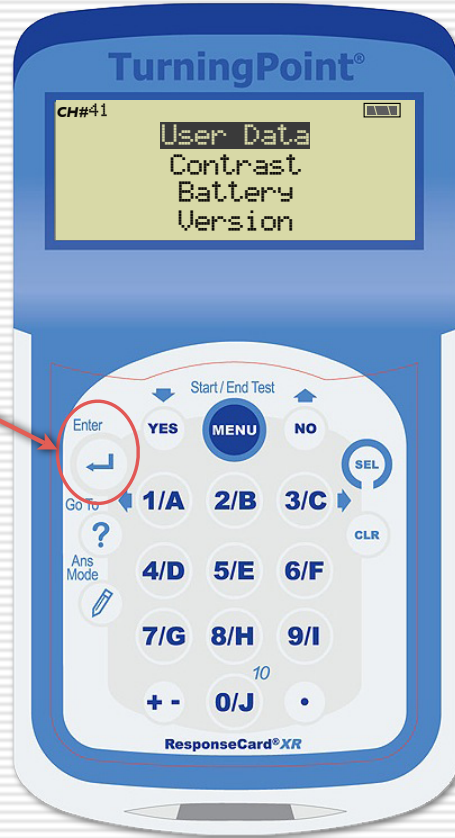


Press Enter to go into
User Data

Edit User Data

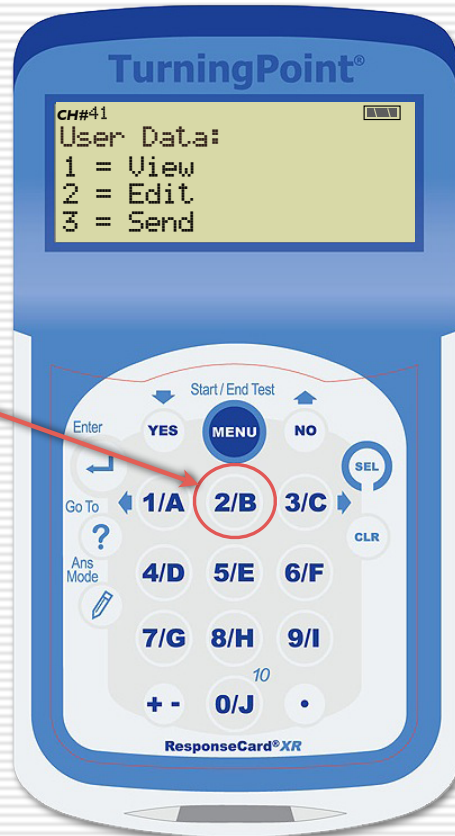


Press 2 to Edit your
User Data

Enter First Name

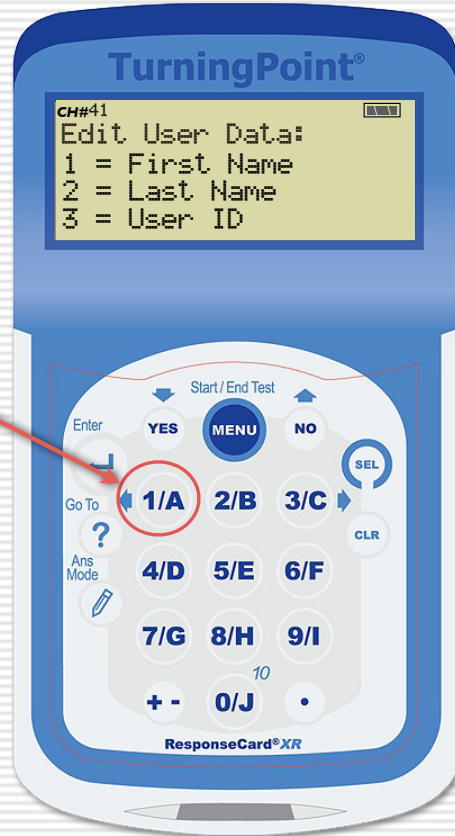


Press 1 to enter your first name

Selecting Letters

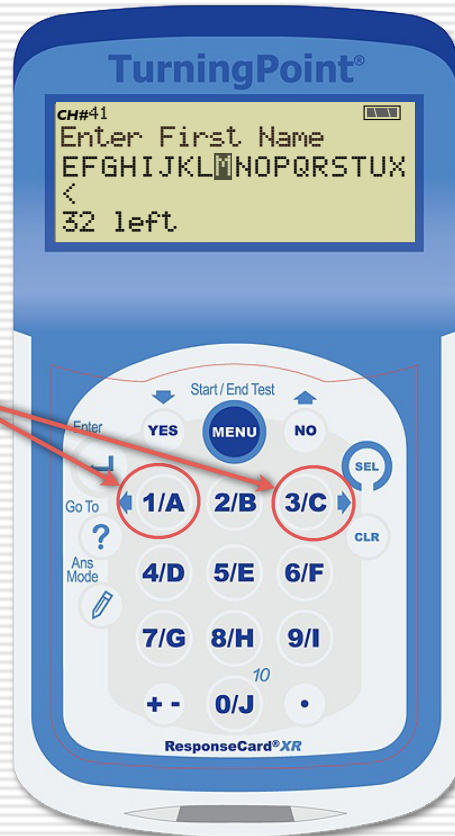


Use the left and right arrows to select the first letter of your first name

Selecting Letters

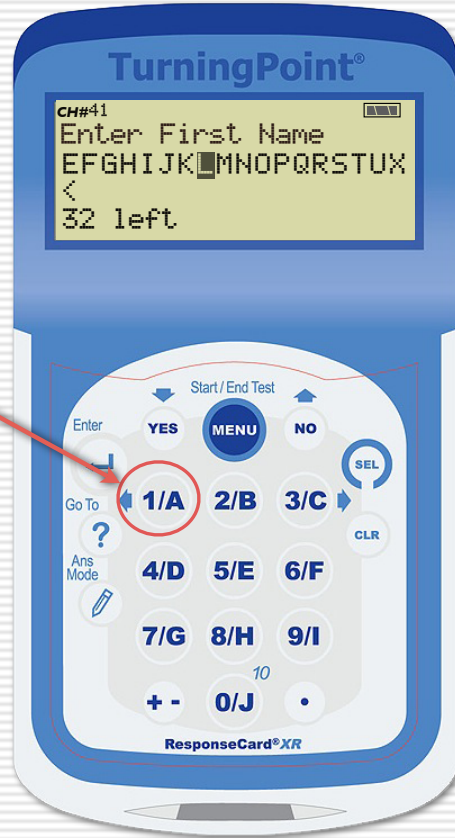


Press the left arrow
once to select the
letter L

Entering the First Letter

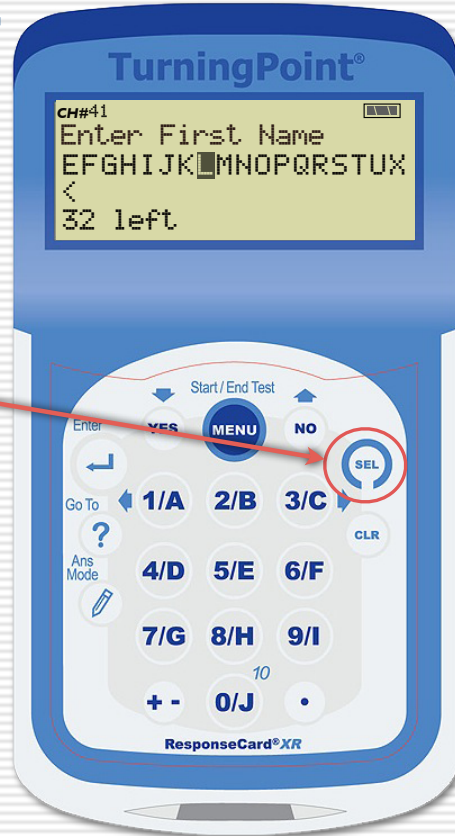


Press SEL to select
the first letter

Ready for more letters

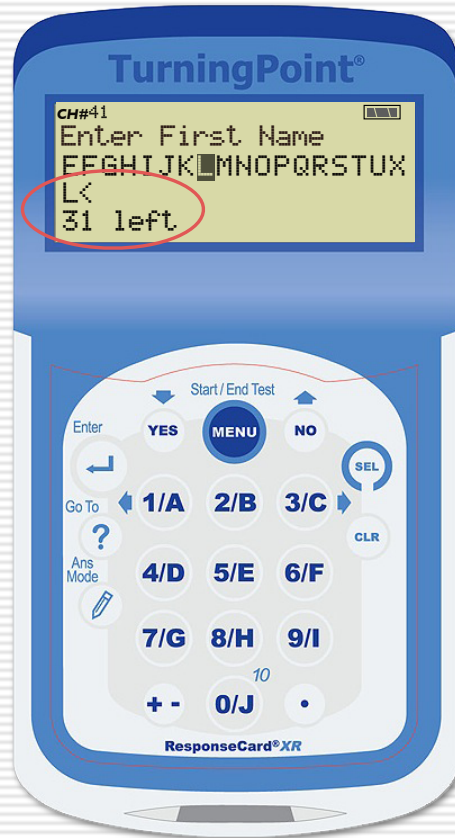


Making Corrections

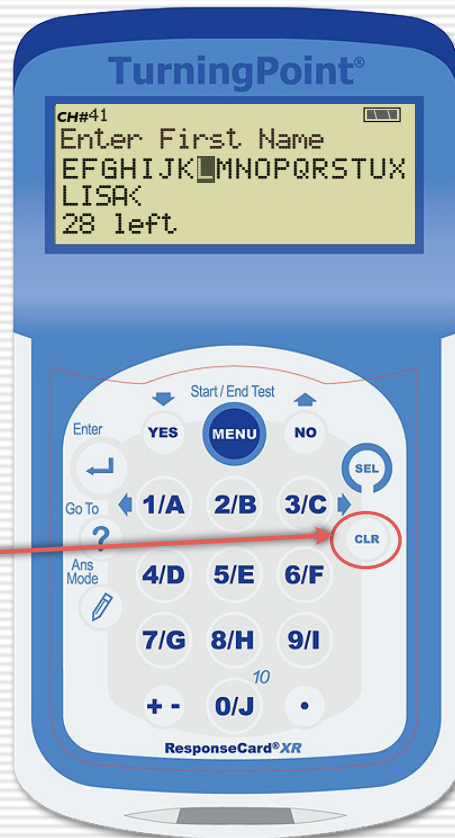

Use the left and right arrows to continue spelling your name

Use the CLR button to backspace and make corrections


Done Entering Name

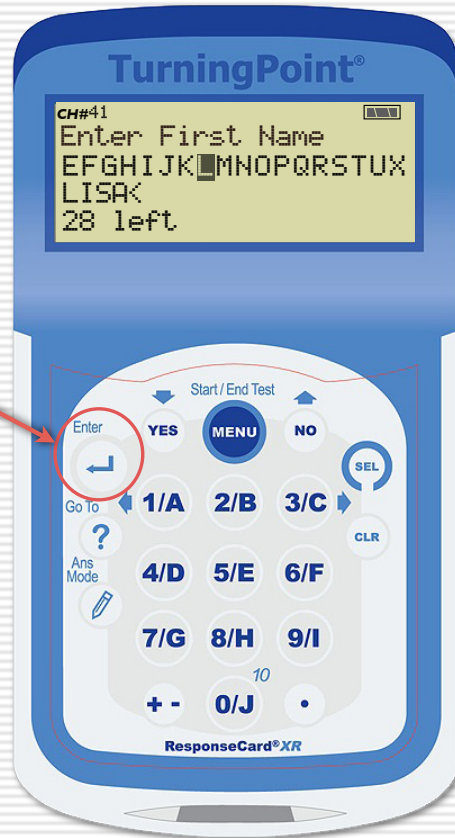

When you are done,
press the Enter
button

Do not press the
MENU button as your
changes will not be
saved.


Cancel Send Data

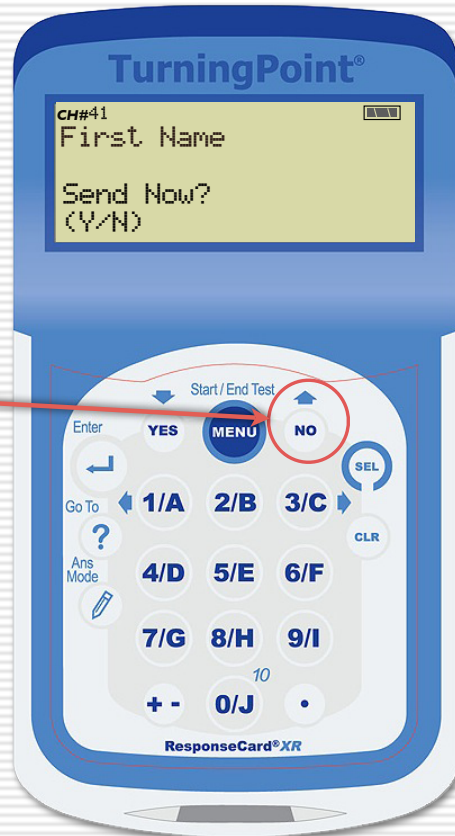

After pressing the
Enter button, you will
get this screen


Press NO

Enter Last Name

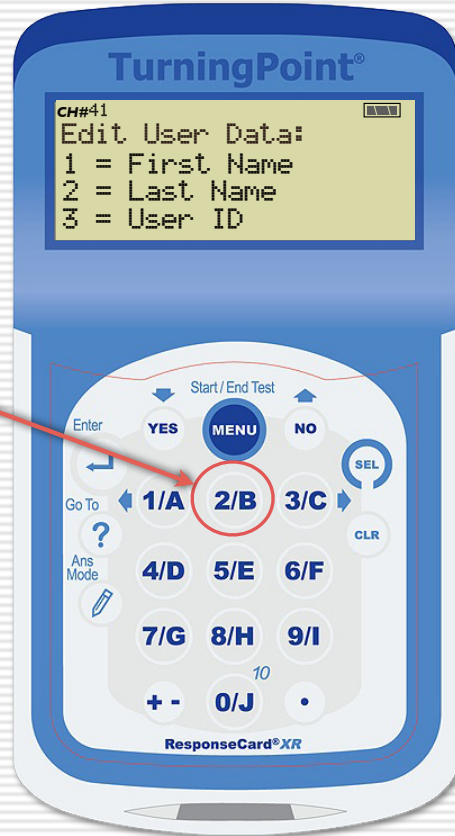


Press 2 to enter your last name - follow the same procedures as your first name

Enter Used ID

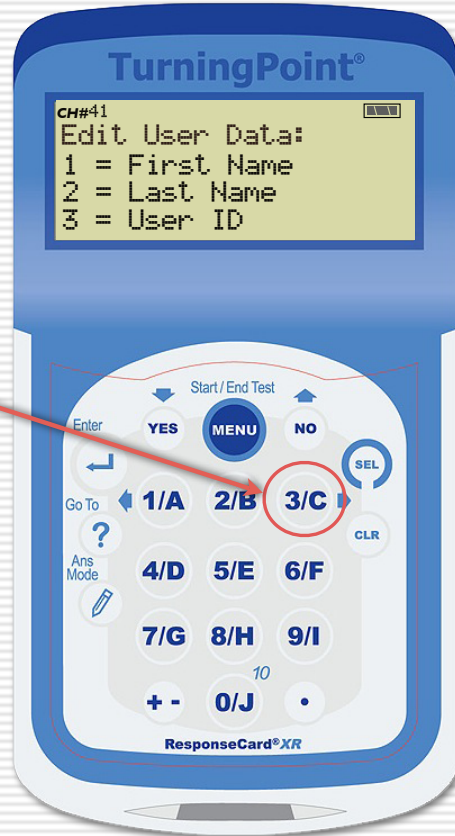


If requested by your instructor, Press 3 to enter your User ID

Back to User Data

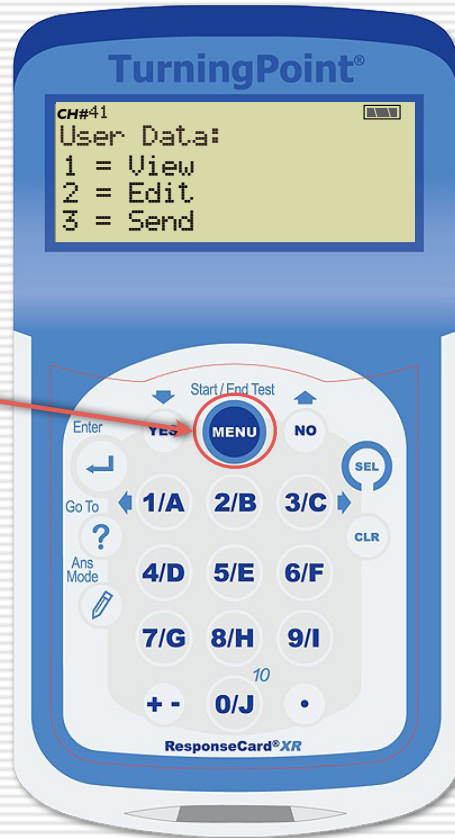

Press **MENU** to move back up the list of menus - in this screen, you can view the data you just entered by pressing one - otherwise press **MENU** again

Select other Options

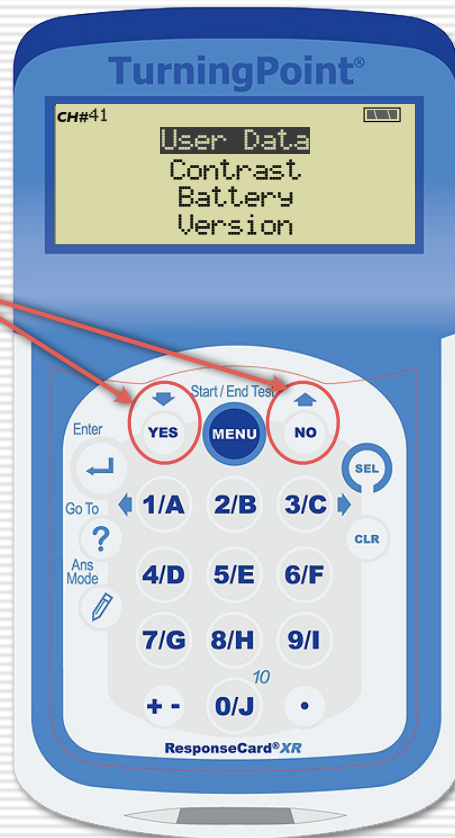

Use the arrow keys to select the other options


Other Setup Options

Once you have selected an option, press the Enter key

Contrast will allow you change the screen contrast

Battery will show the percentage of battery time left

Version shows the clicker's software version number

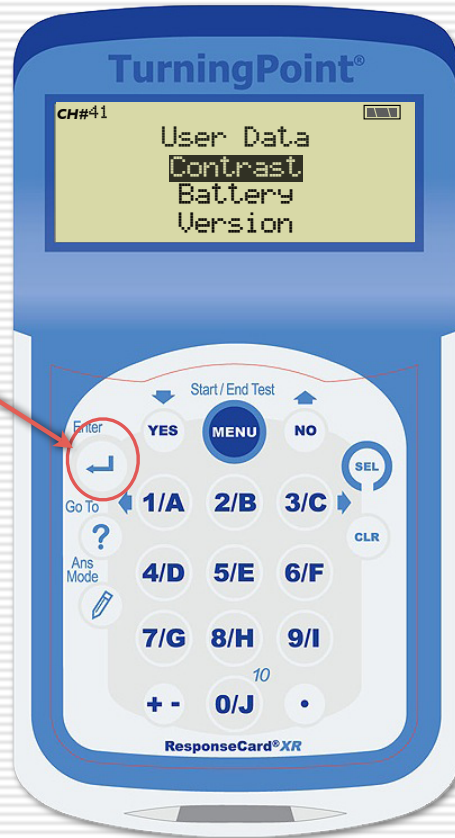

Setup Complete

Press MENU until you return to the top level screen

Set up is complete

